

Index/ Important Information

METRICS

**J1930 TERMINOLOGY
LIST**

GLOSSARY

ALPHABETICAL INDEX

**WE WANT TO HEAR
FROM YOU**

[REDACTED]

[REDACTED]

[REDACTED]

[REDACTED]

[REDACTED]

Metrics

INTRODUCTION

Most threaded fasteners are covered by specifications that define required mechanical properties, such as tensile strength, yield strength, proof load and hardness. These specifications are carefully considered in initial selection of fasteners for a given application. To assure continued satisfactory vehicle performance, replacement fasteners used should be of the correct strength, as well as the correct nominal diameter, thread pitch, length, and finish.

 
Most original equipment fasteners (English system or Metric) are identified with markings or numbers indicating the strength of the fastener. These markings are described in the pages that follow. Attention to these markings is important in assuring that the proper replacement fasteners are used.

Further, some metric fasteners, especially nuts, are colored blue. This metric blue identification is in most cases a temporary aid for production start-up, and color will generally revert to normal black or bright after start-up.


English system and metric system fasteners are available through your Ford Parts and Service operation.

NOMENCLATURE FOR BOLTS


(ENGLISH) INCH SYSTEM Bolt, 1/2-13x1

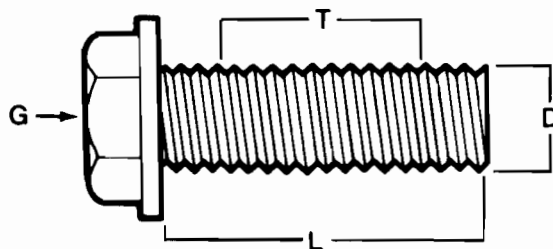

 
- G—Grade Marking
(bolt strength)
- L—Length, (inches)**
- T—Thread Pitch
(thread/inch)
- D—Nominal Diameter
(inches)

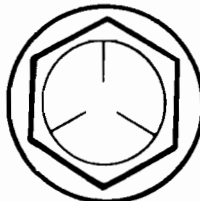

METRIC SYSTEM Bolt M12-1.75x25

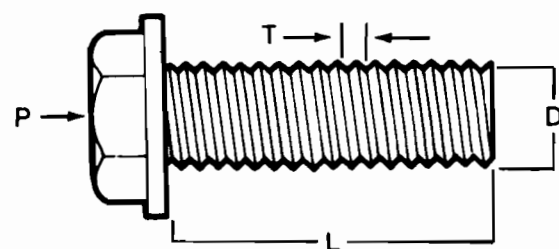 

 - P—Property Class*
(bolt strength)
- L—Length (millimeters)**
- T—Thread Pitch (thread width
crest to crest mm)
- D—Nominal Diameter
(millimeters)

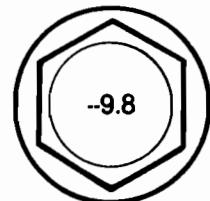

*The property class is an Arabic numeral distinguishable from the slash SAE English grade system.

**The length of all bolts is measured from the underside of the head to the end.

Metrics

 
BOLT STRENGTH IDENTIFICATION

(ENGLISH) INCH SYSTEM



English (Inch) bolts—Identification marks correspond to bolt strength—increasing number of slashes represent increasing strength.

METRIC SYSTEM


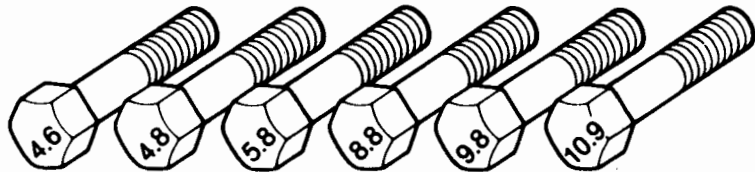


Metric bolts—Identification class numbers correspond to bolt strength—increasing numbers represent increasing strength. Common metric fastener bolt strength property are 9.8 and 10.9 with the class identification embossed on the bolt head.

HEX NUT STRENGTH IDENTIFICATION


(ENGLISH) INCH SYSTEM

  METRIC SYSTEM


Grade	Hex Nut Grade 5	Hex Nut Grade 8	Class	Hex Nut Property Class 9	Hex Nut Property Class 10
Identification			Identification		
	3 Dots	6 Dots		Arabic 9	Arabic 10
Increasing dots represent increasing strength.			May also have blue finish or paint daub on hex flat. Increasing numbers represent increasing strength.		

OTHER TYPES OF PARTS

 Metric identification schemes vary by type of part, most often a variation of that used of bolts and nuts. Note that many types of English and metric fasteners carry no special identification if they are otherwise unique.

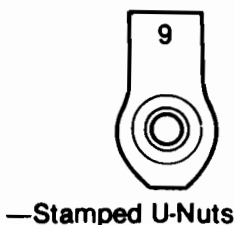

 —Tapping, thread forming and certain other case hardened screws



CLASS
10.9



CLASS
9.8



CLASS
8.8

—Studs, Large studs may carry the property class number. Smaller studs use a geometric code on the end.

Metrics

ENGLISH METRIC CONVERSION

Description	Multiply	By	For Metric Equivalent
ACCELERATION	Foot/sec ²	0.304 8	metre/sec ² (m/s ²)
	Inch/sec ²	0.025 4	metre/sec ²
TORQUE	Pound-inch	0.112 98	newton-metres (N·m)
	Pound-foot	1.355 8	newton-metres
POWER	horsepower	0.746	kilowatts (kw)
PRESSURE or STRESS	inches of water	0.2491	kilopascals (kPa)
	pounds/sq. in.	6.895	kilopascals (kPa)
	pounds/sq. in.	0.069	bar
ENERGY or WORK	BTU	1 055.	joules (J)
	foot-pound	1.355 8	joules (J)
	kilowatt-hour	3 600 000. or 3.6×10^6	joules (J = one W's)
LIGHT	foot candle	10.764	lumens/metre ² (lm/m ²)
FUEL PERFORMANCE	miles/gal	0.425 1	kilometres/litre (km/l)
	gal/mile	2.352 7	litres/kilometre (l/km)
VELOCITY	miles/hour	1.609 3	kilometres/hr. (km/h)
LENGTH	inch	25.4	millimetres (mm)
	foot	0.304 8	metres (m)
	yard	0.914 4	metres (m)
	mile	1.609	kilometres (km)
AREA	inch ²	645.2	millimetres ² (mm ²)
		6.45	centimetres ² (cm ²)
	foot ²	0.092 9	metres ² (m ²)
	yard ²	0.836 1	metres ²
VOLUME	inch ³	16 387.	mm ³
		16.387	cm ³
		0.016 4	litres (l)
	quart	0.946 4	litres
	gallon	3.785 4	litres
	yard ³	0.764 6	metres ³ (m ³)
MASS	pound	0.453 6	kilograms (kg)
	ton	907.18	kilogram (kg)
	ton	0.90718	tonne (t)
FORCE	kilogram	9.807	newtons (N)
	ounce	0.278 0	newtons
	pound	4.448	newtons
TEMPERATURE	degree fahrenheit	(°F – 32) 0.556	degree Celsius (°C)

Metrics

DECIMAL AND METRIC EQUIVALENTS

Fractions	Decimal Inch	Metric mm
1/64	.015625	.397
1/32	.03125	.794
3/64	.046875	1.191
1/16	.0625	1.588
5/64	.078125	1.984
3/32	.09375	2.381
7/64	.109375	2.778
1/8	.125	3.175
9/64	.140625	3.572
5/32	.15625	3.969
11/64	.171875	4.366
3/16	.1875	4.763
13/64	.203125	5.159
7/32	.21875	5.556
15/64	.234375	5.953
1/4	.250	6.35
17/64	.265625	6.747
9/32	.28125	7.144
19/64	.296875	7.54
5/16	.3125	7.938
21/64	.328125	8.334
11/32	.34375	8.731
23/64	.359375	9.128
3/8	.375	9.525
25/64	.390625	9.922
13/32	.40625	10.319
27/64	.421875	10.716
7/16	.4375	11.113
29/64	.453125	11.509
15/32	.46875	11.906
31/64	.484375	12.303
1/2	.500	12.7

Fractions	Decimal Inch	Metric mm
33/64	.515625	13.097
17/32	.53125	13.494
35/64	.546875	13.891
9/16	.5625	14.288
37/64	.578125	14.684
19/32	.59375	15.081
39/64	.609375	15.478
5/8	.625	15.875
41/64	.640625	16.272
21/32	.65625	16.669
43/64	.671875	17.066
11/16	.6875	17.463
45/64	.703125	17.859
23/32	.71875	18.256
47/64	.734375	18.653
3/4	.750	19.05
49/64	.765625	19.447
25/32	.78125	19.844
51/64	.796875	20.241
13/16	.8125	20.638
53/64	.828125	21.034
27/32	.84375	21.431
55/64	.859375	21.828
7/8	.875	22.225
57/64	.890625	22.622
29/32	.90625	23.019
59/64	.921875	23.416
15/16	.9375	23.813
61/64	.953125	24.209
31/32	.96875	24.606
63/64	.984375	25.003
1	1.00	25.4

Metrics

TORQUE CONVERSION

NEWTON METRES (N·m)	POUND-FEET (LB·FT)
1	0.7376
2	1.5
3	2.2
4	3.0
5	3.7
6	4.4
7	5.2
8	5.9
9	6.6
10	7.4
15	11.1
20	14.8
25	18.4
30	22.1
35	25.8
40	29.5
50	36.9
60	44.3
70	51.6
80	59.0
90	66.4
100	73.8
110	81.1
120	88.5
130	95.9
140	103.3
150	110.6
160	118.0
170	125.4
180	132.8
190	140.1
200	147.5
225	166.0
250	184.4

POUND-FEET (LB·FT)	NEWTON METRES (N·m)
1	1.356
2	2.7
3	4.0
4	5.4
5	6.8
6	8.1
7	9.5
8	10.8
9	12.2
10	13.6
15	20.3
20	27.1
25	33.9
30	40.7
35	47.5
40	54.2
45	61.0
50	67.8
55	74.6
60	81.4
65	88.1
70	94.9
75	101.7
80	108.5
90	122.0
100	135.6
110	149.1
120	162.7
130	176.3
140	189.8
150	203.4
160	216.9
170	230.5
180	244.0

J1930 Terminology List

NOTE: Certain Ford component names have been changed in this Service Manual to conform to Society of Automotive Engineers (SAE) directive J1930.

SAE J1930 standardizes automotive component names for all vehicle manufacturers.

This chart lists new 1993 SAE J1930 component names and the obsolete 1992 component names.

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
4X4 Low	4X4L	– 4X4L – 4X4 Low
Air Conditioning	A/C	– A/C – Air Conditioning
Air Conditioning Clutch	ACC	– ACC – Air Conditioning Clutch
Air Conditioning Cyclic Switch	ACCS	– ACCS – Air Conditioning Cyclic Switch
Air Conditioning Demand	ACD	– ACD – Air Conditioning Demand
Air Conditioning On	ACON	– ACON – Air Conditioning On
Automatic Ride Control	ARC	– ACL – Acceleration Signal
Barometric Pressure	BARO	– BP – Barometric Pressure
Battery Positive Voltage	B+	– BATT+ – Battery Positive
Blower	BLR	– BLR – Blower
Brake On/Off	BOO	– BOO – Brake On/Off
Bypass Air	BPA	– BPA – Bypass Air
Canister Purge	CANP	– CANP – Canister Purge
Charge Air Cooler	CAC	– Intercooler
Clutch Pedal Position switch	CPP switch	– CES – CIS – Clutch Engage Switch – Clutch Interlock Switch
Coast Clutch Solenoid	CCS	– CCS – Coast Clutch Solenoid
Computer Control Dwell	CCD	– CCD – Computer Control Dwell
Constant Control Relay Module	CCRM	– IRCM – Integrated Relay Control Module
Crankshaft Position sensor	CKP sensor	– CPS – VRS – Variable Reluctance Sensor

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Cylinder Identification	CID	– CID – Cylinder Identification
Data Link Connector	DLC	– Self-Test connector
Data Negative	DATA-	– DATA- – Data Negative
Data Output Line	DOL	– DOL – Data Output Line
Data Positive	DATA+	– DATA+ – Data Positive
Daytime Running Lamps	DRL	– DRL – Daytime Running Lamps
Defroster	DEF	– DEF – Defroster
Diagnostic Test Mode	DTM	– Self-Test mode
Diagnostic Trouble Code	DTC	– Self-Test code
Differential Pressure Feedback EGR	DPFE	– DPFE – Differential Pressure Feedback EGR
Distributor Ignition	DI	– CBD – DS – TFI – Closed Bowl Distributor – Duraspark Ignition – Thick Film Ignition
Dual Overhead Cam	DOHC	– DOHC – Dual Overhead Cam
Dual Plug Inhibit	DPI	– DPI – Dual Plug Inhibit
EGR Pressure Transducer	EPT	– EPT – EGR Pressure Transducer
EGR Temperature	EGRT	– EGRT – EGR Temperature
EGR Vacuum Regulator	EVR	– EVR – EGR Vacuum Regulator
EGR Valve Position	EVP	– EVP – EGR Valve Position
Electronic Air Pump	EAP	– EAP – Electronic Air Pump
Electronic Engine Control	EEC	– EEC – Electronic Engine Control
Electronic Ignition	EI	– DIS – EDIS – Distributorless Ignition System – Electronic Distributorless Ignition System
Electronic Pressure Control	EPC	– EPC – Electronic Pressure Control
Electronic Secondary Air Injection	EAIR	– EAM – Electronic Air Management

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Engine Coolant Temperature	ECT	– ECT – Engine Coolant Temperature
Engine RPM sensor	RPM sensor	– RPMS – Engine RPM sensor
Exhaust Gas Recirculation	EGR	– EGR – Exhaust Gas Recirculation
Fan Control	FC	– EDF – Electro-Drive Fan
Flexible Fuel sensor	FF sensor	– FCS – FFS – FFV – Fuel Compensation Sensor – Flex Fuel Sensor
Flexible Fuel vehicle	FF vehicle	– FFV – Flexible Fuel Vehicle
Fuel Pressure Regulator Control	FPRC	– FPRC – Fuel Pressure Regulator Control
Fuel Pump	FP	– FP – Fuel Pump
Fuel Pump Monitor	FPM	– FPM – Fuel Pump Monitor
Governor Control Module	GCM	– GEM – Governor Electronic Module
Ground	GND	– GND – Ground
Headlamp	HDL	– HDL – Headlamp
Heated Oxygen Sensor	HO2S	– HEGO – Heated Exhaust Gas Oxygen Sensor
High Fan Control	HFC	– HEDF – High Speed Electro-Drive Fan
High Fuel Pump	HFP	– HFP – High Fuel Pump
High Output	HO	– HO – High Output
High Swirl Combustion	HSC	– HSC – High Swirl Combustion
Idle Air Control	IAC	– ISC – Idle Speed Control
Idle Air Control Bypass Air	IAC BPA	– ISC-BPA – Idle Speed Control — Bypass Air
Ignition Control Module	ICM	– DIS module – EDIS module – TFI module
Ignition Diagnostic Monitor	IDM	– IDM – Ignition Diagnostic Monitor
Inertia Fuel Shutoff switch	IFS switch	– Inertia Switch

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Intake Air Temperature	IAT	– ACT – Air Charge Temperature
Intake Manifold Runner Control	IMRC	– IAC – Inlet Air Control
Keep Alive Memory	KAM	– KAM – Keep Alive Memory
Keep Alive Power	KAPWR	– KAPWR – Keep Alive Power
Knock Sensor	KS	– KS – Knock Sensor
Low Fan Control	LFC	– EDF – Electro-Drive Fan
Low Fuel Pump	LFP	– LFP – Low Fuel Pump
Malfunction Indicator Lamp	MIL	– CEL – “CHECK ENGINE” Light – “SERVICE ENGINE SOON” Light
Manifold Absolute Pressure	MAP	– MAP – Manifold Absolute Pressure
Manifold Absolute Pressure Per Altitude	MAPPA	– GMAPPA – Governor Manifold Absolute Pressure Per Altitude
Manual Lever Position	MLP	– MLP – Manual Lever Position
Mass Air Flow	MAF	– MAF – Mass Air Flow
Mass Air Flow Return	MAF RTN	– MAF RTN – Mass Air Flow Return
Multiport Fuel Injection	MFI	– EFI – Electronic Fuel Injection
Octane Adjust	OCT ADJ	– OCT ADJ – Octane Adjust
Overhead Cam	OHC	– OHC – Overhead Cam
Oxidation Catalytic Converter	OC	– COC – Conventional Oxidation Catalyst
Park/Neutral Position switch	PNP switch	– NDS – NGS – TSN – Neutral Drive Switch – Neutral Gear Switch – Transmission Select Switch Neutral
Positive Crankcase Ventilation	PCV	– PCV – Positive Crankcase Ventilation
Power Ground	PWR GND	– PWR GND – Power Ground

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Power Steering Pressure switch	PSP switch	– PSPS – Power Steering Pressure Switch
Powertrain Control Module	PCM	– ECA – ECM – ECU – EEC processor – Engine Control Assembly – Engine Control Module – Engine Control Unit
Pressure Feedback EGR	PFE	– EPT – Exhaust Pressure Transducer
Profile Ignition Pickup	PIP	– PIP – Profile Ignition Pickup
Programmable Speedometer/Odometer Module	PSOM	– PSOM – Programmable Speedometer/Odometer Module
Pulsed Secondary Air Injection	PAIR	– MPA – PA – Thermactor II – Managed Pulse Air – Pulse Air
Reduction Oxidation Catalytic Converter	REDOX	– REDOX – Reduction Oxidation Catalytic Converter
Scan Tool	ST	– GST – NGS – Generic Scan Tool – New Generation STAR Tester
Secondary Air Injection	AIR	– AM – CT – MTA – Air Management – Conventional Thermactor – Managed Thermactor Air – Thermactor
Secondary Air Injection Bypass	AIRB	– AM1 – TAB – Air Management 1 – Thermactor Air Bypass
Secondary Air Injection Diverter	AIRD	– AM2 – TAD – Air Management 2 – Thermactor Air Diverter
Self-Test Input	STI	– STI – Self-Test Input
Self-Test Output	STO	– STO – Self-Test Output
Sequential Multiport Fuel Injection	SFI	– SEFI – Sequential Electronic Fuel Injection

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Shift Indicator Lamp	SIL	– SIL – Shift Indicator Lamp
Shift Solenoid	SS	– SS – Shift Solenoid
Signal Return	SIG RTN	– SIG RTN – Signal Return
Solid State Relay	SSR	– SSR – Solid State Relay
Spark Output	SPOUT	– SAW – Spark Angle Word
Speed Density	SD	– SD – Speed Density
Super High Output	SHO	– SHO – Super High Output
Supercharger/Supercharged	SC	– SC – Supercharger/Supercharged
Tachometer	TACH	– TACH – Tachometer
Three Way Catalytic Converter	TWC	– TWC – Three Way Catalytic Converter
Three Way + Oxidation Catalytic Converter	TWC+OC	– TWC & COC – Three Way Catalyst and Conventional Oxidation Catalyst
Throttle Body	TB	– TB – Throttle Body
Throttle Body Injection	TBI	– CFI – Central Fuel Injection
Throttle Position	TP	– TP – Throttle Position
Throttle Position Output	TPOUT	– TPOUT – Throttle Position Output
Torque Converter Clutch	TCC	– CCC – CCO – MCCC – Converter Clutch Control – Converter Clutch Override – Modulated Converter Clutch Control
Torque Converter Clutch solenoid	TCC solenoid	– LUS – MLUS – Lock Up Solenoid – Modulated Lock Up Solenoid
Transmission Control Module	TCM	– 4EAT Module
Transmission Control Switch	TCS	– TCS – Transmission Control Switch

J1930 Terminology List

New Term	New Acronyms/ Abbreviations	Old Acronyms/ Term
Transmission Control Indicator Lamp	TCIL	– TCIL – Transmission Control Indicator Lamp
Transmission Oil Temperature	TOT	– TOT – Transmission Oil Temperature
Transmission Range Reverse	TRR	– TSR – Transmission Select Switch Reverse
Transmission Range Overdrive	TROD	– TSOD – Transmission Select Switch Overdrive
Transmission Range Drive	TRD	– TSD – Transmission Select Switch Drive
Transmission Range Low	TRL	– TSL – Transmission Select Switch Low
Transmission Speed Sensor	TSS	– TSS – Transmission Speed Sensor
Turbocharger/Turbocharged	TC	– TC – Turbocharger/Turbocharged
Variable Control Relay Module	VCRM	– VRCM – Variable Relay Control Module
Vehicle Power	VPWR	– VPWR – Vehicle Power
Vehicle Speed Sensor	VSS	– VSS – Vehicle Speed Sensor
Wide Open Throttle	WOT	– WOT – Wide Open Throttle

Glossary

The glossary is a list of technical terms or acronyms and their definitions. It is not intended to be a dictionary of components and their functions. If you desire a detailed description of a specific component, refer to the related Service Manual Group.

2V: Two Valve.

4EAT: 4-speed Electronic Automatic Transaxle.

4V: Four Valve.

4x4 Low (4x4L): Indicates that the 4x4 Low range of the transfer case has been selected.

4x4L: 4x4 Low.

A/C: Air Conditioning.

A/T: Automatic Transmission / Transaxle.

A4LD: Automatic 4-speed Lock-up-convertor Drive transmission.

Absolute Pressure: The pressure referenced to a perfect vacuum.

ACC: Air Conditioning Clutch.

ACCS: Air Conditioning Cyclic Switch.

ACD: Air Conditioning Demand.

ACON: Air Conditioning On.

ACP: Air Conditioning Pressure.

Actuator: A mechanism for moving or controlling something indirectly instead of by hand.

Air Conditioning (A/C): A vehicular accessory system that modifies the passenger compartment air by cooling and drying the air.

Air Conditioning Clutch (ACC): Indicates status of the A/C clutch.

Air Conditioning Cyclic Switch (ACCS): Indicates status of the A/C cyclic switch.

Air Conditioning Demand (ACD): Indicates status of the A/C demand switch.

Air Conditioning On (ACON): Indicates status of the A/C system.

Air Conditioning Pressure (ACP): Indicates pressure in the A/C system.

AIR: Secondary Air Injection.

AIRB: Secondary Air Injection Bypass.

Glossary

AIRD: Secondary Air Injection Diverter.

Ambient Temperature: Temperature of the air surrounding an object.

AOD: Automatic Overdrive transmission.

AODE: Automatic Overdrive Electronic transmission.

AODE-W: Automatic Overdrive Electronic Wide-ratio transmission.

ARC: Automatic Ride Control.

ATDC: After Top Dead Center.

Automatic Ride Control (ARC): A system that automatically adjusts the suspension system to accommodate varying road and driving conditions.

AVOM: Analog Volt-Ohm Meter.

AX4S: Automatic 4-speed Synchronous transaxle.

AXODE: Automatic Overdrive Electronic transaxle.

B+: Battery Positive Voltage.

BARO: Barometric Pressure.

Barometric Pressure (BARO): *formerly BP* The pressure of the surrounding air at any given temperature and altitude.

Base Idle: Idle rpm determined by the throttle lever hardset on the throttle body with the IAC solenoid disconnected.

Base Timing: Spark advance in degrees before top dead center of the base engine without any control from the PCM or ICM.

Battery: An electrical storage device designed to produce a DC voltage by means of an electrochemical reaction.

Battery Positive Voltage (B+): *formerly VBATT or BATT+* The positive voltage from the battery or any circuit connected directly to the battery. Compare "Vehicle Power (VPWR)."

Blower (BLR): A device designed to supply a current of air at a moderate pressure. A blower usually consists of an impeller assembly, a motor and a suitable case. The blower case is designed as part of the ventilation system.

BLR: Blower.

BOO: Brake On / Off.

BPA: Bypass Air.

Glossary

Brake On / Off (BOO): Indicates the position of the brake pedal.

Breakout Box: A service tool that "tees" between the PCM and the 60-pin harness connector. The breakout box contains 60 test pins that can be probed for EEC system testing.

BTDC: Before Top Dead Center.

Bypass Air (BPA): Mechanical control of throttle bypass air.

CAC: Charge Air Cooler.

Camshaft: A shaft on which phased cams are mounted. The camshaft is used to regulate the opening and closing of the intake and exhaust valves.

Camshaft Position (CMP): *formerly CID sensor, hall sensor, or dual hall sensor* Indicates camshaft position.

Canister: A device designed to hold dry material. An evaporative emission canister contains activated charcoal which absorbs fuel vapors and holds them to be purged at an appropriate time.

Canister Purge (CANP): Controls purging of the EVAP canister.

CANP: Canister Purge.

Case Ground (CSE GND): PCM case ground.

Catalytic Convertor: An in-line, exhaust system device used to reduce the level of engine exhaust emissions.

CCD: Computer Controlled Dwell.

CCRM: Constant Control Relay Module.

CCS: Coast Clutch Solenoid.

Charge Air Cooler (CAC): *formerly Intercooler* A device that lowers the temperature of the pressurized intake air.

CID: Cylinder Identification.

Circuit: A complete electrical path or channel, usually includes the source of electrical energy. Circuit may also describe the electrical path between two or more components. May also be used with fluids, air or liquids.

CKP: Crankshaft Position.

Clutch: A mechanical device which uses mechanical, magnetic or friction type connections to facilitate engaging or disengaging of two shafts or rotating members.

Clutch Pedal Position (CPP): *formerly CES or CIS* Indicates clutch pedal position.

CMP: Camshaft Position.

Glossary

CO: Carbon Monoxide.

CO₂: Carbon Dioxide.

Coast Clutch Solenoid (CCS): Controls the coast clutch in the transmission.

Computed Timing: The total spark advance in degrees before top dead center. Equals base timing plus / minus an additional factor calculated by the PCM based on input from a number of sensors.

Constant Control Relay Module (CCRM): *formerly IRCM* A relay module that provides on-off control of various EEC components.

Continuous Memory: The portion of KAM used to store DTC's generated during Continuous Self-Test.

Continuous Self-Test: A continuous test of the EEC system conducted by the PCM whenever the vehicle is operating.

Control: A means or a device to direct and regulate a process or guide the operation of a machine, apparatus or system.

Coolant: A fluid used for heat transfer. Coolants usually contain additives such as rust inhibitors and antifreeze.

CPP: Clutch Pedal Position.

Crankshaft: The part of an engine which converts the reciprocating motion of the pistons to rotary motion.

Crankshaft Position (CKP): *formerly CPS or VRS* Indicates crankshaft position.

CSE GND: Case Ground.

Curb Idle: PCM controlled idle rpm.

Cylinder Identification (CID): Provides crankshaft or camshaft position information for fuel injection synchronization.

Data: General term for information, usually represented by numbers, letters, or symbols.

Data Link Connector (DLC): *formerly Self-Test connector* Connector providing access and / or control of the vehicle information, operating conditions, and diagnostic information.

Data Output Line (DOL): A circuit that sends certain information from the PCM to the instrument cluster.

Data Positive or Negative (DATA+ or DATA-): Circuits that carry data to the DLC, Message Center, or VCRM.

DATA+ or DATA-: Data Positive or Negative.

Daytime Running Lamps (DRL): A system that keeps the vehicle running lamps on at all times while the vehicle is operating.

Glossary

DEF: Defroster.

Defroster (DEF): An electrically heated device designed to remove frost, ice, or snow from the rear window of the vehicle.

DI: Distributor Ignition.

Diagnostic Test Mode (DTM): *formerly Self-Test mode* A level of capability in an On-Board Diagnostic (OBD) system. This may include different functional states to observe signals, a base level to read Diagnostic Trouble Codes, a monitor level which includes information on signal levels, bi-directional control with on / off board aids, and the ability to interface with remote diagnosis.

Diagnostic Trouble Code (DTC): *formerly Self-Test code* An alpha / numeric identifier for a fault condition identified by the On-Board Diagnostic System.

Differential Pressure: The pressure difference between two regions, such as between the intake manifold and the atmospheric pressures.

Differential Pressure Feedback EGR (DPFE): An EGR system that monitors differential EGR pressure across a remote orifice to control EGR flow.

Distributor: A mechanical device designed to switch a high voltage secondary circuit from an ignition coil to spark plugs in the proper firing sequence.

Distributor Ignition (DI): *formerly TFI, CBD, or Duraspark* A system in which the ignition coil secondary circuit is switched by a distributor in proper sequence to various spark plugs.

DLC: Data Link Connector.

DOHC: Dual Overhead Cam.

DOL: Data Output Line.

DPFE: Differential Pressure Feedback EGR.

DPI: Dual Plug Inhibit.

DRL: Daytime Running Lamps.

DTC: Diagnostic Trouble Code.

DTM: Diagnostic Test Mode.

Dual Overhead Cam (DOHC): An engine configuration that uses two camshafts positioned above the valves.

Dual Plug Inhibit (DPI): A circuit that inhibits the operation of the second plug in each cylinder on dual plug vehicles.

DVOM: Digital Volt-Ohm Meter.

Glossary

E4OD: Electronic 4-speed Overdrive transmission.

EAIR: Electronic Secondary Air Injection.

EAP: Electric Air Pump.

ECT: Engine Coolant Temperature.

EEC: Electronic Engine Control.

EEC-IV: Ford's fourth generation EEC system.

EGR: Exhaust Gas Recirculation.

EGR Pressure Transducer (EPT): An EGR system that uses a mechanical pressure transducer to control EGR flow.

EGR Temperature (EGRT): Sensing EGR function based on temperature change. Primarily in systems with mechanical flow control devices.

EGR Vacuum Regulator (EVR): Controls EGR flow by changing vacuum to the EGR valve.

EGR Valve Position (EVP): An EGR system that directly monitors EGR valve position to control EGR flow.

EGRT: EGR Temperature.

EI: Electronic Ignition.

Electric Air Pump (EAP): An electric pump used in EAIR systems.

Electronic Engine Control (EEC): The system that provides electronic control of engine operation.

Electronic Ignition (EI): *formerly DIS or EDIS* A system in which the ignition coil secondary circuit is dedicated to specific spark plugs without the use of a distributor. Ford currently has two types of EI systems, Low Data Rate (formerly DIS) and High Data Rate (formerly EDIS).

Electronic Pressure Control (EPC): Controls fluid pressure in the transmission.

Electronic Secondary Air Injection (EAIR): A pump-driven system for providing secondary air using an electric air pump.

Engine: A machine designed to convert thermal energy into mechanical energy to produce force or motion.

Engine Coolant Temperature (ECT): The temperature of the engine coolant.

Engine RPM (RPM): *formerly RPMS* Indicates engine rpm.

Engine Running Self-Test: A test of the EEC system conducted by the PCM with the engine running and the vehicle at rest.

Glossary

EPC: Electronic Pressure Control.

EPT: EGR Pressure Transducer.

EVAP: Evaporative Emission.

Evaporative Emission (EVAP): A system to prevent fuel vapor from escaping into the atmosphere. Typically includes a charcoal canister to store fuel vapors.

EVP: EGR Valve Position.

EVR: EGR Vacuum Regulator.

Exhaust Gas Recirculation (EGR): Reducing NO_x emissions levels by adding exhaust gas to the incoming air / fuel mixture.

Failure Mode Effects Management (FMEM): An alternative vehicle operation strategy that protects vehicle function from the adverse effect of an EEC system failure.

Fan: A device designed to supply a current of air. A fan may also have a frame, motor, wiring harness and the like.

Fan Control (FC): *formerly EDF* Controlling the engine cooling fan.

FC: Fan Control.

FF: Flexible Fuel.

Flexible Fuel (FF): *formerly Flex Fuel or FFV* A system capable of using a variety of fuels for vehicle operation.

FMEM: Failure Mode Effects Management.

Four Valve (4V): Four valves, two intake and two exhaust, per cylinder.

FP: Fuel Pump.

FPM: Fuel Pump Monitor.

FPRC: Fuel Pressure Regulator Control.

Fuel: Any combustible substance burned to provide heat or power. Typical fuels include gasoline and diesel fuel. Other types of fuel include ethanol, methanol, natural gas, propane or in combination.

Fuel Pressure Regulator Control (FPRC): Controls the fuel pressure regulator. Used primarily to provide extra fuel during cold starts.

Fuel Pump (FP): A pump used to deliver fuel to the engine.

Fuel Pump Monitor (FPM): Monitors operation of the fuel pump.

Glossary

Fuel Rich/Lean: A qualitative evaluation of air /fuel ratio based on an A /F ratio known as stoichiometry or 14.7:1. In the EEC system, rich / lean is determined by a voltage signal from the HO2S. An excess of oxygen (lean) is indicated by an HO2S voltage of less than .4 volts; a rich condition is indicated by an HO2S voltage of greater than .6 volts.

FWD: Front Wheel Drive.

GCM: Governor Control Module.

GEN: Generator.

Generator (GEN): *formerly Alternator* A rotating machine designed to convert mechanical energy into electrical energy.

GND: Ground.

Goose: A brief opening and closing of the throttle (Dynamic Response test).

Governor: A device designed to automatically limit engine speed.

Governor Control Module (GCM): *formerly GEM* The module that controls the governor.

Ground (GND): An electrical conductor used as a common return for an electric circuit(s) and with a relative zero potential.

GVW: Gross Vehicle Weight.

Hall Effect: A process where current is passed through a small slice of semi-conductor material at the same time as a magnetic field to produce a small voltage in the semi-conductor.

Hard Fault: A fault currently present in the system.

Hardware Limited Operating Strategy (HLOS): A mode of operation where the PCM replaces output commands with fixed values in response to certain PCM malfunctions.

HC: Hydrocarbon.

HDL: Headlamp.

Headlamp (HDL): Indicates status of the headlamps.

Heated Oxygen Sensor (HO2S): *formerly HEGO* An Oxygen Sensor (O2S) that is electrically heated.

HFC: High Fan Control.

HFP: High Fuel Pump.

High Fan Control (HFC): *formerly HEDF* Controlling the high speed cooling fan.

High Fuel Pump (HFP): Controls the high speed fuel pump.

Glossary

High Swirl Combustion (HSC): A cylinder and piston configuration that causes swirling of the air / fuel mixture in the cylinder.

HLOS: Hardware Limited Operating Strategy.

HO: High Output.

HO2S: Heated Oxygen Sensor.

HSC: High Swirl Combustion.

IAC: Idle Air Control.

IAT: Intake Air Temperature.

ICM: Ignition Control Module.

Idle Air Control (IAC): *formerly ISC* Electrical control of throttle bypass air.

IDM: Ignition Diagnostic Monitor.

IFS: Inertia Fuel Shutoff.

IGN GND: Ignition Ground.

Ignition: System used to provide high voltage spark for internal combustion engines.

Ignition Control Module (ICM): *formerly TFI module, DIS module, or EDIS module* The module that controls the ignition system.

Ignition Diagnostic Monitor (IDM): Monitors operation of the ignition system.

IMRC: Intake Manifold Runner Control.

Inertia Fuel Shutoff (IFS): *formerly Inertia switch* An inertia system that shuts off the fuel delivery system when activated by predetermined force limits.

Injector: A device for delivering metered pressurized fuel to the intake system or the cylinders.

Intake Air: Air drawn through a cleaner and distributed to each cylinder for use in combustion.

Intake Air Temperature (IAT): *formerly ACT* The temperature of the intake air.

Intake Manifold Runner Control (IMRC): *formerly IAC* Controls airflow through runners in the intake manifold.

Intermittent: A fault that may not be present or identifiable at the present time.

KAM: Keep Alive Memory.

KAPWR: Keep Alive Power.

Glossary

Keep Alive Memory (KAM): A portion of the memory within the PCM that must maintain power even when the vehicle is not operating.

Keep Alive Power (KAPWR): Dedicated, unswitched power circuit that maintains KAM.

Key On Engine Off Self-Test: A test of the EEC system conducted by the PCM with power applied and the engine at rest.

Knock: The sharp metallic sound produced when two pressure fronts collide in the combustion chamber of an engine.

Knock Sensor (KS): Detects engine knock.

KOEO: Key On Engine Off.

KOER: Key On Engine Running.

KS: Knock Sensor.

L: Liters.

LFC: Low Fan Control.

LFP: Low Fuel Pump.

Low Fan Control (LFC): *formerly EDF* Controlling the low speed cooling fan.

Low Fuel Pump (LFP): Controls the low speed fuel pump.

M/T: Manual Transmission / Transaxle.

MAF: Mass Air Flow.

MAF RTN: Mass Air Flow Return.

Malfunction Indicator Lamp (MIL): A required on-board indicator to alert the driver of an emission related malfunction. May read either "CHECK ENGINE" or "SERVICE ENGINE SOON."

Manifold: A device designed to collect or distribute fluid, air or the like.

Manifold Absolute Pressure (MAP): The absolute pressure of the intake manifold air.

Manifold Absolute Pressure Per Altitude (MAPPA): *formerly GMAPPA* Manifold absolute pressure value adjusted for altitude.

Manual Lever Position (MLP): Indicates the position of the manual lever in electronically controlled transmissions.

MAP: Manifold Absolute Pressure.

Glossary

MAPPA: Manifold Absolute Pressure Per Altitude.

Mass Air Flow (MAF): A system which provides information on the mass flow rate of the intake air to the engine.

Mass Air Flow Return (MAF RTN): A return circuit for the MAF sensor.

MFI: Multiport Fuel Injection.

MIL: Malfunction Indicator Lamp.

MLP: Manual Lever Position.

Module: A self-contained group of electrical / electronic components, which is designed as a single replaceable unit.

Monitor Box: An optional EEC system test device which connects in series with the PCM and its harness and permits measurements of PCM inputs and outputs.

Multiport Fuel Injection (MFI): *formerly EFI* A fuel-delivery system in which each cylinder is individually fueled.

NAAO: North American Automotive Operations.

NC: Normally Closed.

NO: Normally Open.

NOx: Nitrous Oxides.

O2S: Oxygen Sensor.

OASIS: On-line Automotive Service Information System.

OBD: On-Board Diagnostic.

OC: Oxidation Catalytic Convertor.

OCT ADJ: Octane Adjust.

Octane Adjust (OCT ADJ): Can alter engine strategy to compensate for changes in fuel octane.

OHC: Overhead Cam.

On-Board Diagnostic (OBD): A system that monitors some or all computer input and control signals. Signal(s) outside of the predetermined limits imply a fault in the system or in a related system.

Open Circuit: A circuit which does not provide a complete path for flow of current.

Overhead Cam (OHC): An engine configuration that uses a single camshaft positioned above the valves.

Glossary

Overlay Card: A plastic card used with the monitor box to identify EEC signals for each engine. The card also programs the monitor box for auto mode measurements.

Oxidation Catalytic Converter (OC): *formerly COC* A catalytic converter system that reduces levels of HC and CO.

Oxygen Sensor (O2S): *formerly EGO* A sensor which detects oxygen (O2) content in the exhaust gases.

PAIR: Pulsed Secondary Air Injection.

Park / Neutral Position (PNP): *formerly NDS, NGS, or TSN* Indicates the selected non-drive modes of the transmission.

PCM: Powertrain Control Module.

PCV: Positive Crankcase Ventilation.

PFE: Pressure Feedback EGR.

PIP: Profile Ignition Pickup.

PNP: Park / Neutral Position.

Positive Crankcase Ventilation (PCV): A system that vents vapors from the crankcase.

Power Ground (PWR GND): The main ground circuit in the EEC system.

Power Steering: A system which provides additional force to the steering mechanism, reducing the driver's steering effort.

Power Steering Pressure (PSP): *formerly PSPS* Indicates the pressure in the power steering system.

Powertrain: The elements of a vehicle by which motive power is generated and transmitted to the driven axles.

Powertrain Control Module (PCM): *formerly EEC processor, ECA, ECM, or ECU* The module that controls the EEC system.

Pressure Feedback EGR (PFE): An EGR system that monitors EGR pressure across a remote orifice to control EGR flow.

Profile Ignition Pickup (PIP): Provides crankshaft or camshaft position information for ignition synchronization.

Programmable Speedometer / Odometer Module (PSOM): A module that processes vehicle speed information for use in various electronic systems. The PSOM can be programmed to accommodate various tire and axle combinations.

PSOM: Programmable Speedometer / Odometer Module.

PSP: Power Steering Pressure.

Glossary

Pulsed Secondary Air Injection (PAIR): *formerly Thermactor II* A pulse-driven system for providing secondary air without an air pump by using the engine exhaust system pressure fluctuations or pulses.

Pump: A device used to raise, transfer, or compress fluids by suction, pressure or both.

PWR GND: Power Ground.

QSB: Quarterly Service Bulletin.

Quick Test: A functional diagnostic test of the EEC system consisting of vehicle preparation and hookup, KOEO and KOER Self-Tests.

RABS: Rear Antilock Brake System.

Recorder: An optional EEC system test device which works jointly with the monitor box. It allows up to eight EEC signals to be electronically recorded over a 50 second period.

REDOX: Reduction Oxidation Catalytic Convertor.

Reduction Oxidation Catalytic Convertor (REDOX): A catalytic convertor system that is designed to operate at high temperatures. At low temperatures, it reduces levels of HC and CO. At high temperatures, it reduces levels of HC, CO, and NO_x.

Reference Voltage (VREF): A dedicated circuit that provides a 5.0 volt signal used as a reference by certain sensors.

Relay: A generally electromechanical device in which connections in one circuit are opened or closed by changes in another circuit.

Relay Module (RM): A module containing two or more relays.

Return (RTN): A dedicated sensor ground circuit.

RM: Relay Module.

RPM: Engine RPM.

RTN: Return.

RWD: Rear Wheel Drive.

SC: Supercharged.

Scan Tool (ST): A device that interfaces with and communicates information on a data link.

SD: Speed Density.

Secondary Air: Air provided to the exhaust system.

Glossary

Secondary Air Injection (AIR): *formerly Thermactor or Air Management* A pump driven system for providing secondary air.

Secondary Air Injection Bypass (AIRB): *formerly TAB or AM1* Vents secondary air to atmosphere.

Secondary Air Injection Diverter (AIRD): *formerly TAD or AM2* Diverts secondary air to either the catalyst or the exhaust manifold.

Self-Test: One of three subsets of the EEC system Quick Test; Key On Engine Off, Engine Running, and Continuous.

Self-Test Input (STI): A dedicated circuit used to initiate the PCM Self-Test.

Self-Test Output (STO): A dedicated circuit used to output PCM diagnostic information pulses.

Sensor: The generic name for a device that senses either the absolute value or a change in a physical quantity such as temperature, pressure or flow rate, and converts that change into an electrical quantity signal.

Sequential Multiport Fuel Injection (SFI): *formerly SEFI* A multiport fuel delivery system in which each injector is individually energized and timed relative to its cylinder intake event. Normally fuel is delivered to each cylinder once per two crankshaft revolutions in four cycle engines and once per crankshaft revolution in two cycle engines.

SFI: Sequential Multiport Fuel Injection.

Shift Indicator Lamp (SIL): A lamp that indicates the preferred shift points for manual transmission / transaxle vehicles.

Shift Solenoid (SS): Controls shifting in an automatic transmission / transaxle.

SHO: Super High Output.

Short Circuit: An undesirable connection between a circuit and any other point.

SIG RTN: Signal Return.

Signal Return (SIG RTN): A dedicated sensor ground circuit that is common to two or more sensors.

SIL: Shift Indicator Lamp.

Solenoid: A device consisting of an electrical coil which, when energized, produces a magnetic field in a plunger which is pulled to a central position. A solenoid may be used as an actuator in a valve or switch.

Spark Output (SPOUT): Desired spark timing information sent from the PCM to the ICM.

Speed: The magnitude of velocity (regardless of direction).

Speed Density (SD): A system which infers information from various sensor inputs on the flow rate of the intake air to the engine.

Glossary

SPOUT: Spark Output.

SS: Shift Solenoid.

ST: Scan Tool.

STI: Self-Test Input.

STO: Self-Test Output.

Supercharged (SC): An intake system that utilizes a supercharger.

Supercharger: A mechanically driven device that pressurizes the intake air, thereby increasing the density of charge air and the consequent power output from a given engine displacement.

Switch: A device for making breaking, or changing the connections in an electrical circuit.

System: A group of interacting mechanical or electrical components serving a common purpose.

TACH: Tachometer.

Tachometer (TACH): A circuit that provides input for an electronic tachometer display.

TB: Throttle Body.

TCC: Torque Convertor Clutch.

TCIL: Transmission Control Indicator Lamp.

TCS: Transmission Control Switch.

Test: A procedure whereby the performance of a product is measured under various conditions.

Three Way + Oxidation Catalytic Converter (TWC+OC):*formerly TWC & COC* A catalytic converter system that has both Three Way Catalyst (TWC) and Oxidation Catalyst (OC). Usually secondary air is introduced between the two catalysts.

Three Way Catalytic Converter (TWC): A catalytic converter system that reduces levels of HC, CO, and NOx.

Throttle: A valve for regulating the supply of a fluid, usually air or an air / fuel mix, to an engine.

Throttle Body (TB): The device containing the throttle.

Throttle Position (TP): Indicates the position of the throttle plate.

Throttle Position Output (TPOUT): Communicates throttle position information from the PCM to the GCM.

Timing: Relationship between spark plug firing and piston position usually expressed in crankshaft degrees before (BTDC) or after (ATDC) top dead center of the compression stroke.

Glossary

Torque Converter: A device which by its design multiplies the torque in a fluid coupling between an engine and transmission/transaxle.

Torque Converter Clutch (TCC): *formerly CCC, CCO, LUS, MLUS, or MCCC* Controlling the torque converter clutch.

TOT: Transmission Oil Temperature.

TP: Throttle Position.

TPOUT: Throttle Position Output.

TR: Transmission Range.

Transaxle: A device consisting of a transmission and axle drive gears assembled in the same case. Compare "Transmission."

Transmission: A device which selectively increases or decreases the ratio of relative rotation between its input and output shafts. Compare "Transaxle."

Transmission Control Indicator Lamp (TCIL): Indicates that the TCS has been activated.

Transmission Control Switch (TCS): Modifies the operation of electronically controlled transmissions.

Transmission Oil Temperature (TOT): Indicates temperature of transmission fluid.

Transmission Range (TR): The range in which the transmission is operating.

Transmission Range Drive (TRD): *formerly TSD* Indicates operator selection of the Drive transmission range.

Transmission Range Low (TRL): *formerly TSL* Indicates operator selection of the Low transmission range.

Transmission Range Overdrive (TROD): *formerly TSOD* Indicates operator selection of the Overdrive transmission range.

Transmission Range Reverse (TRR): *formerly TSR* Indicates operator selection of the Reverse transmission range.

Transmission Speed Sensor (TSS): Indicates rotational speed of the transmission output shaft or turbine shaft.

TRD: Transmission Range Drive.

TRL: Transmission Range Low.

TROD: Transmission Range Overdrive.

TRR: Transmission Range Reverse.

TSB: Technical Service Bulletin.

Glossary

TSS: Transmission Speed Sensor.

TWC: Three Way Catalytic Convertor.

TWC+OC: Three Way + Oxidation Catalytic Convertor.

Two Valve (2V): Two valves, one intake and one exhaust, per cylinder.

Valve: A device by which the flow of liquid, gas, vacuum, or loose material in bulk may be started, stopped or regulated by a movable part that opens, shuts or partially obstructs one or more ports or passageways. A "Valve" is also the moveable part of such a device.

Variable Control Relay Module (VCRM): A relay module that provides variable control of various EEC components.

VCRM: Variable Control Relay Module.

VECI Label: Vehicle Emission Control Information Label.

Vehicle Power (VPWR): A switched circuit that provides power to the EEC system. Compare "Battery Positive Voltage (B+)."

Vehicle Speed Sensor (VSS): A sensor which provides vehicle speed information.

VOM: Volt-Ohm Meter.

VPWR: Vehicle Power.

VREF: Reference Voltage.

VSS: Vehicle Speed Sensor.

WAC: Wide Open Throttle A / C Cutoff.

Warm Up Oxidation Catalytic Converter (WU-OC): A catalytic converter system designed to lower HC and CO emissions during engine warm up. Usually located in or near the exhaust manifold.

Warm Up Three-Way Catalytic Converter (WU-TWC): A catalytic converter system designed to lower HC, CO, and NOx emissions during engine warm up. Usually located in or near the exhaust manifold.

Wide Open Throttle (WOT): A condition of maximum airflow through the throttle body.

Wide Open Throttle A / C Cutoff (WAC): Turns A / C system off during wide open throttle or certain other operating conditions.

WOT: Wide Open Throttle.

WU-OC: Warm Up Oxidation Catalytic Converter.

WU-TWC: Warm Up Three-Way Catalytic Converter.

Alphabetical Index

A

Accelerator Pedal and Linkage	10-02-1	Removal & Installation	15-02-1
Adjustments	10-02-2	Audio Systems—Service	15-00-1
Description	10-02-1	AM/FM Multiplex Radio—ESR	15-00-3
Free Play	10-02-2	AM/FM Multiplex with Cassette Player	15-00-4
Removal & Installation	10-02-1	Antenna	15-00-1
Throttle Cable	10-02-1	Antenna Base & Mast	15-00-20
Wide-Open Throttle Position	10-02-2	Antenna Cable & Base	15-00-20
Air Conditioning System	12-03-1	Antenna with Cable & Mast	15-00-20
A/C Hose	12-03-11	Cassette Tape Player	15-00-2
A/C Relays	12-03-12	Description & Operation	15-00-1
A/C Switch	12-03-2	Diagnosis & Testing	15-00-8
Adding Refrigerant Oil	12-03-19	Poor Sound Quality	15-00-21
Adjustments	12-03-19	Premium Analog Cassette Radio	15-00-6
Air Distribution	12-03-5	Premium Sound	15-00-1
Airflow	12-03-4	Radio Reception	15-00-2
Blower Switch	12-03-1	Speakers	15-00-2
Clutch Pulley Bearing	12-03-17		15-00-20
Compressor	12-03-12	Tape Error Messages	15-00-7
Compressor & Clutch	12-03-2	Visual Inspection — Audio System	15-00-11
Condenser	12-03-10		
Condenser Fan	12-03-12		
Description and Operation	12-03-1		
Diagnosis and Testing	12-03-10		
Disassembly & Assembly	12-03-18		
Evaporator Assembly	12-03-11		
	12-03-18		
Maintenance	12-03-19		
Operation	12-03-9		
Pressure Plate, Pulley & Field Coil	12-03-13		
Receiver Drier	12-03-11		
Removal & Installation	12-03-10		
Service Tools	12-03-20		
Shaft Seal	12-03-16		
Specifications	12-03-19		
Temperature Control	12-03-4		
Air Intake System	03-12-1		
Air Cleaner Assembly	03-12-2		
Air Filter	03-12-1		
Description	03-12-1		
Diagnosis & Testing	03-12-1		
Removal & Installation	03-12-1		
Specifications	03-12-2		
Antenna	15-02-1		
Antenna Mast & Base	15-02-1		

B

Battery	14-01-1
Battery Capacity Test	14-01-2
Battery Charging	14-01-3
Battery Cleaning	14-01-5
Battery Voltage Check	14-01-1
Diagnosis & Testing	14-01-1
Maintenance	14-01-5
Removal & Installation	14-01-3
Service	14-01-4
Service Tools	14-01-6
Tools	14-01-4
Battery and Charging System—Service	14-00-1
Description & Operation	14-00-1
Diagnosis & Testing	14-00-1
On-Bench Testing	14-00-6
On-Vehicle Charging System Tests	14-00-2
Service Tools	14-00-10
Specifications	14-00-10
Body Panels—Front End	01-02-1
Adjustments	01-02-3
Body & Sheet Metal	01-02-1

Alphabetical Index

Body Panels	01-02-4	Brake Pedal	06-06-3
Description	01-02-1	Brake Tube Replacement	06-06-5
Engine Compartment Underbody Panels	01-02-7	Caliper Hose	06-06-5
Fender	01-02-6	Description	06-06-1
Hood	01-02-10	Diagnosis & Testing	06-06-2
Hood Alignment	01-02-3	Master Cylinder	06-06-3
Hood Bumpers	01-02-8		06-06-6
Hood Hinge	01-02-10	Proportioning Valve	06-06-3
Hood, Hinge & Latch	01-02-2	Push Rod Length	06-06-14
Hood Latch	01-02-11	Removal & Installation	06-06-3
Hood Release Cable	01-02-12	Specifications	06-06-14
Hood Safety Latch	01-02-11		
Hood Seals	01-02-10	Brake System, Parking	06-05-1
Hood Support Rod	01-02-13	Adjustments	06-05-7
Hood Weatherstrip	01-02-9	Cable, Parking Brake	06-05-7
Inner Splash Shield, Front Fender	01-02-6	Cables, Long	06-05-4
Latch Adjustment	01-02-5	Description	06-05-1
Lower Inner Splash Shield, Front Fender	01-02-7	Lever, Parking Brake	06-05-3
Removal & Installation	01-02-6	Removal & Installation	06-05-3
Specifications	01-02-14	Service Tools	06-05-8
Splash Shield, A-Pillar	01-02-7	Specifications	06-05-8
Stone Guard, Front	01-02-8		
Support & Bracket, Front Center	01-02-8	Brake System, Power	06-07-1
		Adjustments	06-07-2
Body—Service	01-00-1	Brake Booster	06-07-1
Adjustments	01-00-2	Description	06-07-1
Appearance Protection	01-00-8	Inspection	06-07-2
Body Alignment, Unitized	01-00-2	Push Rod Length	06-07-2
Body Dimensions	01-00-3	Removal & Installation	06-07-1
Body Maintenance	01-00-8	Specifications	06-07-2
Body Misalignment Check	01-00-2	Vacuum Hose & Check Valve	06-07-2
Body Sealer Types	01-00-1		
Bumper Covers	01-00-9	Brake System—Service	06-00-1
Cleaning & Inspection	01-00-7	Adjustments	06-00-19
Description	01-00-1	Brake Booster Functional Test	06-00-12
Diagnosis & Testing	01-00-2	Brake Pedal Height	06-00-14
Dust & Water Leaks	01-00-2	Brake Pedal Travel Measurement	06-00-15
Engine Compartment & Linear Dimensions	01-00-4	Brake Rotor Diagnosis Chart	06-00-16
Exterior Parts, Flexible—Refinishing	01-00-13	Brake Shudder	06-00-15
Floorpan Plugs & Grommets	01-00-7	Brake System, Dual	06-00-3
Rattle Elimination	01-00-8	Brake Tube Replacement	06-00-20
Service	01-00-9	Description	06-00-1
Service Tools	01-00-14	Diagnosis & Testing	06-00-7
Trim	01-00-8	Disc Brakes, Front	06-00-4
Underbody Linear Dimensions	01-00-5	Disc Brakes, Rear	06-00-4
Underbody Misalignment Check	01-00-2	Hydraulic System	06-00-6
Underbody Plane Dimensions	01-00-6	Hydraulic System Bleeding	06-00-19
		Inspection	06-00-4
Brake System, Hydraulic	06-06-1	Master Cylinder	06-00-7
Adjustments	06-06-14	Parking Brake	06-00-5

Alphabetical Index

Push Rod Length	06-00-19	Removal & Installation	13-04-3
Road Test	06-00-4	Voltage Gauge System	13-04-2
Service Tools	06-00-21	Voltmeter	13-04-3
Specifications	06-00-20		
System Priming	06-00-19		
Brakes, Front Disc	06-03-1	Climate Control System—Service	12-00-1
Brake Pads	06-03-2	Air Conditioning System	12-00-3
	06-03-3	Connecting Manifold Gauge Set	12-00-28
Brake Rotor Refinishing	06-03-11	Description & Operation	12-00-3
Caliper	06-03-5	Diagnosis and Testing	12-00-5
	06-03-9	General Information	12-00-2
Description	06-03-1	Heat System	12-00-33
Disassembly & Assembly	06-03-9	Rear Window Defroster	12-00-24
Major Service Operations	06-03-11	Refrigerant System Service	12-00-28
Removal & Installation	06-03-3	Safety Precautions	12-00-2
Rotor	06-03-7	Service Precautions	12-00-2
Service Precautions	06-03-3	Service Tools	12-00-34
Service Tools	06-03-11	Specifications	12-00-34
Specifications	06-03-11	System Components, Cleaning and	
		Back-Flushing	12-00-31
		System Discharging	12-00-28
Brakes, Rear Disc	06-04-1	Clock	13-07-1
Brake Pads	06-04-4	Description	13-07-1
	06-04-5	Removal & Installation	13-07-1
Brakes, Parking	06-04-3		
Caliper	06-04-8	Clutch Controls	08-02-1
	06-04-11	Adjustments	08-02-5
Description	06-04-1	Clutch Cable	08-02-2
Disassembly & Assembly	06-04-11	Clutch Pedal	08-02-3
Removal & Installation	06-04-5	Clutch Pedal Height	08-02-5
Rotor	06-04-10	Clutch Pedal Switch	08-02-2
Service Tools	06-04-13	Description & Operation	08-02-1
Specifications	06-04-13	Hydraulic Clutch Bleeding	08-02-7
Bumpers	01-19-1	Hydraulic Clutch Master Cylinder	08-02-5
Bumper Assembly, Front	01-19-1	Hydraulic Clutch Reservoir Fluid Level	08-02-7
Bumper Assembly, Rear	01-19-2	Hydraulic Clutch Slave Cylinder	08-02-5
Removal & Installation	01-19-1	Pedal Freeplay	08-02-6
Specifications	01-19-4	Removal & Installation	08-02-2
		Specifications	08-02-7
		Clutch/Pressure Plate	08-01-1
		Adjustments	08-01-2
		Clutch Cover	08-01-4
		Clutch Disc	08-01-4
		Clutch Pressure Plate, Disc & Flywheel	08-01-3
		Clutch Release Bearing	08-01-5
		Description & Operation	08-01-1
		Flywheel	08-01-5
		Removal & Installation	08-01-3
		Service Tools	08-01-9
Charging System Gauge	13-04-1		
Description	13-04-1		
Diagnosis & Testing	13-04-1		

C

Alphabetical Index

Specifications	08-01-8
Clutch System—Service	08-00-1
Clutch & Clutch Cable	08-00-1
Description	08-00-1
Diagnosis	08-00-1
Gear Noise	08-00-4
Oil Leakage	08-00-5
Transaxle	08-00-3
Convertible	01-17A-1
Adjustments	01-17A-28
Convertible Top Assembly	01-17A-3
Convertible Top Care	01-17A-3
Convertible Top Material	01-17A-4
Convertible Top Retainer	01-17A-3
Convertible Top-to-Windshield Adjustment ..	01-17A-32
Description & Operation	01-17A-1
Diagnosis and Testing	01-17A-1
Door Glass Fit	01-17A-29
Door Glass Height Stop Adjustment	01-17A-31
Door Glass Lateral Adjustment	01-17A-30
Door Glass Longitudinal Adjustment	01-17A-31
Door Glass Rear Channel Adjustment	01-17A-32
Latch Effort	01-17A-28
Maintenance	01-17A-3
Moulding, Storage Cover-to-Convertible	
Top	01-17A-18
Parts	01-17A-34
Plastic Window, Rear	01-17A-3
Quarter Glass Fore & Aft Adjustment	01-17A-32
Removal & Installation	01-17A-3
Shingle Weatherstrip Adjustment	01-17A-5
Specifications	01-17A-42
Storage Cover	01-17A-25
Storage Cover Bumpers	01-17A-25
Storage Cover Hinge	01-17A-27
Storage Cover Latch	01-17A-21
Storage Cover Latch Cables	01-17A-22
Storage Cover Lock Set & Actuator	01-17A-21
Storage Cover Pivot Caps	01-17A-21
Storage Cover Strikers	01-17A-23
Storage Cover Support	01-17A-26
Storage Cover Trim Cover	01-17A-24
Weatherstrip, Convertible Top Side	01-17A-17
Weatherstrip, Convertible Top-to-	
Windshield	01-17A-17
Weatherstrip, Rear Seat-to-Storage Cover ..	01-17A-20
Weatherstrip, Storage Cover-to-Body	01-17A-19
Window, Rear	01-17A-3

D

Doors and Deck Lid	01-03-1
Adjustments	01-03-2
Bumpers, Deck Lid	01-03-11
Deck Lid	01-03-1
01-03-8	
Deck Lid Alignment	01-03-4
Description	01-03-1
Door Alignment	01-03-2
Door & Hinges	01-03-5
Door Bumper	01-03-3
01-03-6	
Door Bumper Guide	01-03-6
Door Check Assembly	01-03-6
Door Inspection	01-03-2
Door, Striker	01-03-3
Doors	01-03-2
Gas Lift Cylinders, Luggage Compartment	01-03-10
Hinge, Deck Lid	01-03-9
Removal & Installation	01-03-5
Specifications	01-03-12
Spoiler	01-03-11
Striker, Deck Lid	01-03-4
01-03-7	
Weatherstrip, Deck Lid	01-03-10
Weatherstrip, Door	01-03-7
Drive Belts, Accessory	03-05-1
Adjustments	03-05-1
Description	03-05-1
Drive Belt, Generator	03-05-3
Drive Belt, Power Steering & Air Conditioning ..	03-05-4
Generator/Water Pump Drive Belt Tension	03-05-1
Power Steering & Air Conditioning Drive Belt	
Tension	03-05-2
Removal & Installation	03-05-3
Service Tools	03-05-5
Specifications	03-05-5

E

Electrical Devices—Miscellaneous	18-04-1
Ash Receptacle & Cigar Lighter	18-04-3

Alphabetical Index

Cigar Lighter System	18-04-2	Operation	03-07-1
Description & Operation	18-04-1	Removal & Installation	03-07-2
Diagnosis & Testing	18-04-1	Secondary Ignition Wires	03-07-2
Removal & Installation	18-04-3	Service Tools	03-07-8
Engine and Transaxle Mounting	02-03-1	Spark Plugs	03-07-3
Engine Mount, Front	02-03-2	Specifications	03-07-8
Engine Mount, Rear	02-03-2	Engine, 1.6L	03-01-1
Engine Mount, RH	02-03-1	Camshaft	03-01-13
Removal & Installation	02-03-1		03-01-43
Service Tools	02-03-4	Camshaft Seal	03-01-16
Specifications	02-03-4	Connecting Rod	03-01-37
Engine Cooling	03-03-1	Core Plugs	03-01-22
Cleaning	03-03-29	Crankshaft	03-01-37
Cleaning and Inspection Pressure Cap		Crankshaft End Play	03-01-39
Testing	03-03-6	Crankshaft, Main Bearings & Connecting Rod	
Coolant Condition Check	03-03-8	Bearings	03-01-15
Coolant Draining & Replacement	03-03-9		03-01-38
Coolant Level Check	03-03-8	Crankshaft Oil Clearance	03-01-39
Coolant Temperature Switch	03-03-21	Crankshaft Oil Seal, Front	03-01-21
Cooling Fan	03-03-20	Crankshaft Oil Seal, Rear	03-01-21
Cooling Fan Motor	03-03-21	Cylinder Block	03-01-33
Cooling Fan Relay	03-03-21	Cylinder Block Flatness	03-01-34
Cooling System Flush Procedure	03-03-9	Cylinder Bores	03-01-35
Cooling System Pressure Test	03-03-7	Cylinder Head	03-01-9
Description	03-03-1		03-01-29
Diagnosis & Testing	03-03-4		03-01-40
Engine Cooling System	03-03-12	Description	03-01-1
Leak Testing	03-03-16	Disassembly & Assembly	03-01-22
Oil Cooler Transfer or Replacement	03-03-29	Engine	03-01-22
Pressure Test	03-03-6	Engine Assembly	03-01-2
Radiator	03-03-17	Exhaust Manifold	03-01-17
Radiator Core	03-03-29	Flywheel, Pilot Bearing	03-01-33
Radiator Tank	03-03-21	Intake Manifold	03-01-16
Removal & Installation	03-03-17	Oil Pan	03-01-18
Service Procedures	03-03-29	Oil Pump	03-01-20
Service Tools	03-03-32		03-01-32
Specifications	03-03-32		03-01-39
Thermostat	03-03-19	Oil Jet	03-01-40
Thermostat Testing	03-03-8	Piston & Connecting Rod	03-01-31
Water Pump	03-03-19	Piston & Connecting Rod Assembly	03-01-20
Engine Ignition	03-07-1	Pistons, Piston Rings & Piston Pins	03-01-36
Description	03-07-1	Removal & Installation	03-01-2
Diagnosis and Testing	03-07-2	Service Procedures	03-01-33
Disassembly & Assembly	03-07-4	Service Tools	03-01-48
Distributor	03-07-2	Specifications	03-01-46
	03-07-4	Subassemblies	03-01-31
Distributor Cap & Rotor	03-07-2	Timing Belt	03-01-11
Ignition Coil	03-07-3	Valve & Valve Guide	03-01-41
		Valve Seat	03-01-42

Alphabetical Index

Valve Spring	03-01-43	Diagnosis & Testing	03-04A-13
Valve Stem Seals	03-01-18	Engine Coolant Temperature Sensor	03-04A-15
Engine—Service	03-00-1	Fuel Injectors	03-04A-14
Camshaft Lobe Lift	03-00-6	Fuel System	03-04A-4
Closed-Type Positive Crankcase Ventilation (PCV) System	03-00-02	Idle Speed	03-04A-16
Compression Test	03-00-5	Oxygen Sensor	03-04A-15
Description	03-00-1	Powertrain Control Module	03-04A-10
Diagnosis & Testing	03-00-2		03-04A-13
Dynamic Valve Train Analysis	03-00-6	Removal & Installation	03-04A-13
Emission Calibration Label	03-00-2	Service Tools	03-04A-17
Engine Identification	03-00-2	Specifications	03-04A-17
Engine Oil Leaks	03-00-2	Throttle Body	03-04A-13
Excessive Engine Oil Consumption	03-00-3	Throttle Position Sensor	03-04A-14
Exhaust Emission Control System	03-00-2		03-04A-16
Service Tools	03-00-6	Turbo Boost Gauge Sensor	03-04A-16
Static Engine Off Valve Train Analysis	03-00-6	Volume Air Flow Sensor	03-04A-14
Evaporative Emissions	03-13-1	Fuel Gauge	13-03-1
Canister Purge Solenoid Valve	03-13-3	Description	13-03-1
Carbon Canister	03-13-2	Diagnosis & Testing	13-03-2
Description	03-13-1	Fuel Gauge	13-03-4
Diagnosis & Testing	03-13-2	Fuel Level Indicating System	13-03-2
Removal & Installation	03-13-2	Fuel Tank Sending Unit	13-03-4
Two-Way Check Valve	03-13-2	Removal & Installation	13-03-4
Exhaust System	09-00-1	Fuel System—Service	10-00-1
Diagnosis	09-00-1	Air Cleaner	10-00-2
Exhaust Back Pressure—Check	09-00-4	Cleaning & Inspection	10-00-2
Exhaust Leakage or Noise	09-00-1	Description	10-00-1
Exhaust System Alignment	09-00-2	Diagnosis and Testing	10-00-1
Removal & Installation	09-00-5	Fuel Injection, Electronic	10-00-2
Restricted Exhaust System	09-00-3	Fuel Tank, Filter and Electric Fuel Pump	10-01-1
Service Tools	09-00-5	Control Circuit	10-01-4
		Description	10-01-1
		Diagnosis & Testing	10-01-4
		Filler Neck Hose Clamp	10-01-8
		Fuel Filler Door	10-01-5
		Fuel Filler Hose Clamp	10-01-8
		Fuel Filler Neck	10-01-7
		Fuel Pump	10-01-2
			10-01-9
		Fuel Pump Relay	10-01-10
		Fuel System Pressure Relief	10-01-5
		Fuel Tank	10-01-6
		Fuel Tank Hose Clamp	10-01-9
		In-Line Filter	10-01-9
		In-Tank Filter	10-01-9
		Pressure Regulator	10-01-3
			10-01-10
		Removal & Installation	10-01-5
Fuel Charging and Controls—1.6L	03-04A-1		
Adjustments	03-04A-16		
Airflow	03-04A-9		
Air Induction System	03-04A-6		
Barometric Pressure Sensor	03-04A-15		
Bypass Air Control Valve	03-04A-9		
Bypass Air Valve	03-04A-15		
Description & Operation	03-04A-1		

F

Alphabetical Index

Specifications 10-01-10

G

Gauges, Warning Devices, Miscellaneous—

Analog	13-09-1
Brake Fluid Level Switch	13-09-19
Brake Indicator	13-09-2
Check Engine Warning Lamp	13-09-1
Description	13-09-1
Diagnosis & Testing	13-09-3
High Beam Indicator	13-09-2
High Beam Switch	13-09-18
Instrument Panel Lamps	13-09-1
Parking Brake Switch	13-09-18
Removal & Installation	13-09-18
Safety Belt Indicator	13-09-1
Safety Belt Switch	13-09-19
Warning/Indicator Lamp Bulbs	13-09-18
Warning Indicator System	13-09-8

Generator, Integral Voltage Regulator — Internal Fan

and Regulator Type	14-02-1
Adjustments	14-02-7
Bearing Replacement	14-02-6
Brush Replacement	14-02-5
Charging System	14-02-1
Circuit Description	14-02-1
Cleaning & Inspection	14-02-6
Description	14-02-1
Disassembly & Assembly	14-02-3
Removal & Installation	14-02-2
Service Tools	14-02-7
Specifications	14-02-7

Glass, Frames and Mechanisms 01-11-1

Adjustments	01-11-16
Bus Bar Terminal Service	01-11-20
Description	01-11-1
Diagnosis & Testing	01-11-3
Door Glass Height Stop Adjustment	01-11-17
Door Glass Lateral Adjustment	01-11-16
Door Glass Longitudinal Adjustment	01-11-17
Door Glass Rear Channel Adjustment	01-11-18
Door Quarter Window	01-11-14
Door Window Switch	01-11-8
Grid Wire Service, Rear Window Defroster	01-11-19

Lubrication	01-11-19
Major Service Operations	01-11-19
Motor, Regulator Assembly	01-11-11
ON/OFF Switch, Rear Window Defroster	01-11-15
Power Windows System	01-11-4
Quarter Glass Fore & Aft Adjustment	01-11-19
Removal & Installation	01-11-6
Service Tools	01-11-21
Shingle Weatherstrip Adjustment	01-11-18
Specifications	01-11-21
Window Channel, Rear	01-11-13
Window Glass	01-11-9
Window Guide	01-11-9
Windshield	01-11-6

H

Halfshafts, Front Drive 05-04-1

Description	05-04-1
Diagnosis	05-04-4
Disassembly and Assembly	05-04-10
Halfshaft	05-04-7
Halfshaft Handling	05-04-4
Halfshafts, Naturally Aspirated Vehicles	05-04-3
Halfshafts Turbocharged Vehicles	05-04-4
Hoisting	05-04-5
Jointshaft	05-04-10
Removal & Installation	05-04-7
Rzeppa CV Joint	05-04-12
Service Tools	05-04-21
Specifications	05-04-21
Towing	05-04-5
Tripot Joint	05-04-18
Undercoating & Rustproofing	05-04-5
Wheel & Tire Balancing	05-04-5

Handles, Locks, Latches and Mechanisms 01-14-1

Door Latch	01-14-1
Door Latch Release Lever	01-14-1
Door Lock Cylinder, Front	01-14-2
Latch, Deck Lid	01-14-3
Lock Cylinder, Luggage Compartment	01-14-3
Outside Handle, Front Door	01-14-2
Removal & Installation	01-14-1
Specifications	01-14-4

Alphabetical Index

Hardtop, Removable	01-17B-1
Description	01-17B-1
Dome Lamp	01-17B-8
Exterior Mouldings, Side & Rear	01-17B-6
Hardtop	01-17B-1
Hardtop Front Attachment Bracket	01-17B-7
Hardtop Side & Rear Windows	01-17B-8
Hardtop-to-Vehicle Weatherstrip	01-17B-7
Headlining	01-17B-8
Mouldings, Roof	01-17B-6
Removal & Installation	01-17B-1
Service Tools	01-17B-11
Side/Rear Attachments	01-17B-7
Side Window Opening Weatherstrip	01-17B-7
Specifications	01-17B-11
Trim Panels, Interior Side	01-17B-5
Trim Panel, Rear	01-17B-5
Window Retainer, Moulding—Side	01-17B-6
Wiring Harness	01-17B-7

Heating and Defrosting	12-02-1
Adjustments	12-02-16
Air Distribution	12-02-2
Air Door Control Cable	12-02-17
Airflow	12-02-1
Air Inlet Duct	12-02-14
Blower Case Assembly	12-02-8
Blower Motor	12-02-7
Blower Motor Resistor	12-02-7
Blower Switch	12-02-4
Control Cables	12-02-6
Control Cable Adjustment	12-02-16
Defroster Ducts	12-02-13
Defroster Tubes & Side Demister Tubes	12-02-13
Description	12-02-1
Diagnosis and Testing	12-02-5
Function Selector Cable	12-02-16
Function Selector Rod	12-02-16
Heat Ducts, Rear Seat	12-02-14
Heater Case	12-02-9
Heater Control Panel	12-02-5
Heater Core	12-02-10
Heater Hoses	12-02-12
Heater Tube, LH	12-02-15
Instrument Panel Ducts	12-02-14
Register, LH Side & Center	12-02-12
Register, RH Side	12-02-13
Removal & Installation	12-02-5
Specifications	12-02-17

Temperature Control	12-02-2
Temperature Control Cable	12-02-17
Horn	13-06-1
Adjustments	13-06-4
Description	13-06-1
Diagnosis & Testing	13-06-2
Horn Relay	13-06-5
Horn Switch	13-06-4
Horn System	13-06-2
Horns & Brackets	13-06-4
Removal & Installation	13-06-4
Specifications	13-06-5

I

Identification Codes	00-01-1
Description	00-01-1
Official Vehicle Identification Number	00-01-1
Vehicle Build Date	00-01-5
Vehicle Certification Label	00-01-2

Instrument Cluster—Conventional	13-01-1
Description	13-01-1
Diagnosis and Testing	13-01-4
Disassembly & Assembly	13-01-12
Heater Control Panel Bulb	13-01-12
Instrument Cluster	13-01-10
Instrument Cluster Bulbs	13-01-11
Panel Dimmer Switch	13-01-12
Removal & Installation	13-01-10
Specifications	13-01-13
Speed Sensor	13-01-11

Instrument Panel and Console	01-12-1
Console, Front	01-12-12
Console, Rear	01-12-11
Description	01-12-1
Glove Compartment	01-12-9
Instrument Cluster Bezel	01-12-1
Instrument Panel Assembly	01-12-2
Latch, Glove Compartment	01-12-10
Lock, Glove Compartment	01-12-10
Removal & Installation	01-12-1
Shifter Boot	01-12-15
Specifications	01-12-15
Striker, Glove Compartment	01-12-10

Alphabetical Index

L

Lifting, Jacking, Spare Tire Stowage and

Emergency Towing	00-02-1
Hoisting & Jacking	00-02-1
Spare Tire Stowage	00-02-3
Specifications	00-02-5
Towing	00-02-3
Towing Procedures	00-02-4

Lighting, Exterior

Adjustments	17-01-33
Backup Lamps System	17-01-23
Description	17-01-1
Diagnosis & Testing	17-01-4
Exterior Lighting System	17-01-14
Fog Lamps	17-01-2
	17-01-28
Fog Lamp Switch	17-01-29
Headlamp	17-01-1
	17-01-25
Headlamp Aim	17-01-33
Headlamp Assembly	17-01-26
Headlamp Motor	17-01-27
Headlamp Motor Switch	17-01-28
Headlamp Switch	17-01-27
Headlamps/Headlamp Doors and Fog	
Lamps	17-01-7
High Beam/Flash-to-Pass Switch	17-01-28
High Beam Indicator Lamp Bulb	17-01-28
High-Mount Stoplamp	17-01-31
Lamp Assembly Bulb Replacement, Rear	17-01-31
Lamp Assembly, Rear	17-01-30
License Plate Lamp Bulb	17-01-31
Linkage	17-01-27
Parking Lamp/Bulb, Front	17-01-29
Parking/Marker, Tail and License Lamps	17-01-3
Removal & Installation	17-01-25
Side Marker Lamp/Bulb, Front	17-01-30
Side Marker Lamps, Rear	17-01-32
Specifications	17-01-33
Stoplamps	17-01-3
Stoplamp Switch	17-01-32
Turn Signal/Hazard Warning and Stoplamps	
System	17-01-19

Lighting, Interior

Description & Operation	17-02-1
-------------------------------	---------

Diagnosis & Testing	17-02-2
Door Switch	17-02-7
Lamp/Bulb, Glove Compartment	17-02-8
Lamp, Dome	17-02-7
Lamps, Courtesy	17-02-7
Lens/Bulb, Cargo Lamp	17-02-9
Removal & Installation	17-02-7

M

Maintenance and Lubrication

Lubrication	00-03-6
Maintenance	00-03-1
Maintenance Schedule & Record Log	00-03-2
Specifications	00-03-8
Vehicle Emission Control Information Decal	00-03-2

Mirrors, Rear View

Bulb, Inside Rear View Mirror Lamp	01-09-7
Description	01-09-1
Diagnosis & Testing	01-09-3
Electrical Schematic	01-09-3
Mirror Assembly, Outside Rear View	01-09-5
Mirror, Inside Rear View	01-09-1
	01-09-6
Mirrors, Outside Rear View	01-09-2
Removal & Installation	01-09-5
Specifications	01-09-7
Switch, Outside Rear View Mirror	01-09-5

N

Noise, Vibration and Harshness

Diagnosis & Testing	00-04-6
Diagnostic Theory	00-04-1
Glossary	00-04-2
How to Use This Diagnostic Procedure	
Section	00-04-2
Non-Transaxle Noise	00-04-3
NVH Diagnosis	00-04-3
Road Test	00-04-4
Road Test Quick Checks	00-04-6
Service Tools	00-04-12
Transaxle Noise	00-04-3

Alphabetical Index

R

Radio and Tape Chassis	15-01-1
Non-Premium Sound	15-01-1
Premium Sound	15-01-2
Premium Sound Amplifier	15-01-2
Radio	15-01-1
Removal & Installation	15-01-1
Service Tools	15-01-3

Restraints, Active	01-20A-1
Adjustments	01-20A-5
Buckle Assembly, Front	01-20A-3
Child Seat Tether Restraint Attachment	01-20A-2
Cleaning	01-20A-6
Description	01-20A-1
Functional Test Procedure	01-20A-6
Major Service Operations	01-20A-5
Removal & Installation	01-20A-2
Retractor & Harness Assembly, Front	01-20A-2
Retractor & Harness Assembly, Rear	01-20A-3
Safety Belt Buckle, Rear	01-20A-4
Safety Belt Maintenance	01-20A-5
Specifications	01-20A-6
Tether Attachment	01-20A-5

Restraints, Passive—Supplemental Air Bag System — Early Production	01-20B-1
Air Bag Module	01-20B-47
Backup Power Supply	01-20B-48
Description	01-20B-1
Diagnosis & Testing	01-20B-6
Diagnostic Monitor Assembly	01-20B-47
Disposal Procedures	01-20B-44
Driver Air Bag	01-20B-1
Electrical Schematic — Air Bag System	01-20B-10
Operation	01-20B-4
Parts Replacement	01-20B-4
Removal & Installation	01-20B-45
Sensor, Center Radiator	01-20B-45
Sensor, Front, Left or Right	01-20B-46
Sensor, Rear Safing	01-20B-46
Service of Air Bag Equipped Vehicles Involved in Collisions	01-20B-4
Service Precautions	01-20B-5
Service Tools	01-20B-49
Specifications	01-20B-48

Restraints, Passive — Supplemental Air Bag System — Late Production	01-20C-1
Air Bag Module	01-20C-59
Air Bag System Diagnostic Procedure Glossary	01-20C-8
Description and Operation	01-20C-1
Diagnosis & Testing	01-20C-8
Diagnostic Monitor Assembly	01-20C-59
Electrical Schematic — Air Bag System	01-20C-10
General Service Procedures	01-20C-6
Removal & Installation	01-20C-57
Sensor, Center Radiator	01-20C-57
Sensor, Front, Left or Right	01-20C-58
Sensor, Rear Safing	01-20C-58
Service of Air Bag Equipped Vehicles Involved in Collisions	01-20C-6
Service Precautions	01-20C-8
Service Tools	01-20C-60
Specifications	01-20C-60

S

Seats and Tracks	01-10-1
Actuator Lock Set, Rear Seat Back Latch	01-10-16
Cable Actuator, Rear Seat Back Latch	01-10-15
Description	01-10-1
Head Restraint & Cover, Front Seat	01-10-11
Latch, Rear Seat Back	01-10-14
Latch Cable, Rear Seat Back	01-10-15
Lumbar Support Assembly, LH Front Seat	01-10-12
Reclining Mechanisms, Front Seat	01-10-10
Removal & Installation	01-10-1
Seat, Rear	01-10-1
Seat Back, Front	01-10-6
Seat Back Cover & Cushion	01-10-7
Seat Cover & Cushion	01-10-3
Seat Height Adjuster, LH Front Seat	01-10-13
Seat Height Adjustment Mechanism Control Assembly, LH Front Seat	01-10-12
Seat Track Assembly, Front	01-10-2
Seats, Front	01-10-1
Service Tools	01-10-16
Specifications	01-10-16

Speakers	15-03-1
Removal & Installation	15-03-1

Alphabetical Index

Speakers, Door Mounted	15-03-1	Steering Column	11-04-1
Speakers, Rear Seat	15-03-2	Air Bag Module	11-04-1
Speed Control System	10-03-1	Brake Shift Interlock Mechanism	11-04-3
Actuator	10-03-9	Component Fasteners	11-04-1
Actuator Cable	10-03-10	Description	11-04-1
Adjustments	10-03-10	Disassembly & Assembly	11-04-6
Brake Pedal Height	10-03-10	Ignition Switch/Steering Column Lock	11-04-3
Cable/Actuator Assembly	10-03-8	Intermediate Shaft	11-04-5
Clutch Pedal Height	10-03-10	Removal & Installation	11-04-2
Control Module	10-03-8	Service Tools	11-04-10
Control Switches	10-03-7	Specifications	11-04-9
Description and Operation	10-03-1	Steering Column	11-04-4
Diagnosis & Testing	10-03-2		11-04-6
Removal & Installation	10-03-7	Steering Column Shroud	11-04-3
Specifications	10-03-10	Steering Column Support Brackets	11-04-5
Speedometer/Odometer	13-02-1	Steering Wheel	11-04-2
Description	13-02-1	Turn Signal Cancel Cam Service	11-04-8
Diagnosis & Testing	13-02-1	Turn Signal, High Beam and Hazard Flasher	
Removal & Installation	13-02-2	Switch	11-04-3
Speedometer Assembly	13-02-4	Steering Column Switches	11-05-1
Speedometer Cable	13-02-2	Description & Operation	11-05-1
Speedometer Cable Core	13-02-4	Diagnosis & Testing	11-05-3
Speedometer Driven Gear	13-02-4	Hazard Flasher Unit	11-05-7
Speedometer System	13-02-1	Ignition Lock Tumbler	11-05-4
Starting System	03-06-1	Ignition Switch	11-05-1
Armature Coil	03-06-14		11-05-3
Brush & Brush Holder	03-06-16		11-05-5
Bushings	03-06-17	Mechanical Test	11-05-4
Clutch Pedal Position Switch	03-06-6	Multi-Function Switch	11-05-2
Component	03-06-14	Multi-Function Switch Assembly	11-05-6
Description & Operation	03-06-1	Non-Functioning Locks	11-05-5
Diagnosis & Testing	03-06-2	Removal & Installation	11-05-4
Disassembly & Assembly	03-06-11	Specifications	11-05-7
Exploded View	03-06-11	Turn Signal Flasher Unit	11-05-6
Field Coil	03-06-15	Wiper Switch & Turn Signal/High Beam	
Ignition Switch	03-06-6	Lever	11-05-6
Jump Starting	03-06-3	Steering System, Power	11-02-1
Manual Lever Position Switch	03-06-6	Adjustments	11-02-26
	03-06-10	Cleaning & Inspection	11-02-25
Pinion Depth Adjustment	03-06-4	Description	11-02-1
Removal & Installation	03-06-10	Disassembly & Assembly	11-02-13
Service Tools	03-06-18	Dust Boot	11-02-11
Solenoid	03-06-17	Fluid Level Check	11-02-26
Specifications	03-06-18	Flushing Power Steering System	11-02-25
Starter Motor	03-06-10	High Pressure Hose	11-02-12
Starter No-Load Test	03-06-5	Power Rack-&-Pinion Steering Gear	11-02-2
Voltage Drop Tests	03-06-7	Power Steering Hose	11-02-9

Alphabetical Index

Power Steering Pressure Switch	11-02-10	Brake Rotor/Bearing Hub Assembly	04-02-4
Power Steering Pump	11-02-1	Control Arms & Trailing Arm	04-02-10
	11-02-13	Description	04-02-1
Pressure Regulator Valve	11-02-9	Diagnosis & Testing	04-02-4
Pressure/Return Tubing	11-02-13	Grease Seal/Bearings	04-02-5
Pump Assembly	11-02-10	Removal & Installation	04-02-4
Rack Yoke Preload	11-02-26	Service Tools	04-02-15
Removal & Installation	11-02-9	Specifications	04-02-15
Return Hose	11-02-13	Spindle	04-02-9
Service Tools	11-02-27	Strut & Spring, Rear	04-02-7
Specifications	11-02-26		
Start-Up Procedure	11-02-26	Suspension—Service	04-00-1
Steering Gear	11-02-12	Adjustments	04-00-16
	11-02-15	Ball Joints	04-00-4
Tie Rod End	11-02-11	Bearing, Front Wheel	04-00-10
		Bearings, Rear Wheel	04-00-11
Steering System—Service	11-00-1	Camber	04-00-15
Excessive Noise	11-00-3		04-00-16
Fluid Leaks	11-00-3	Centering Steering Wheel	04-00-20
Power Steering Effort Check	11-00-5	Control Arms & Stabilizer	04-00-4
Power Steering Fluid Level Check	11-00-6	Diagnosis & Testing	04-00-2
Power Steering Pressure Switch	11-00-6	Inspection	04-00-3
Pump Flow & Pressure Tester	11-00-4	Service Tools	04-00-21
Service Tools	11-00-6	Specifications	04-00-21
Specifications	11-00-6	Steering Wheel Play	04-00-4
Steering Gear Bushing/Preload Check	11-00-6	Suspension Height	04-00-3
Steering Gear Mount Check	11-00-5	Suspension Struts	04-00-3
Steering Linkage Check	11-00-5	Tie Rods	04-00-4
Steering Wheel Free Play	11-00-5	Tire Lead	04-00-6
Testing	11-00-2	Tires	04-00-3
		Toe-In, Front	04-00-17
Suspension and Wheel Ends—Front	04-01-1	Toe, Rear	04-00-18
Adjustments	04-01-19	Vibration & Roughness	04-00-5
Ball Joint	04-01-9	Wheel Alignment	04-00-15
Brake Rotor/Wheel Hub	04-01-13	Wheel/Tire Runout	04-00-5
Control Arm	04-01-12		
	04-01-19		
Description	04-01-1		
Diagnosis & Testing	04-01-3		
Disassembly & Assembly	04-01-13		
Removal & Installation	04-01-3		
Service Tools	04-01-20		
Specifications	04-01-19		
Steering Knuckle/Bearings	04-01-17		
Strut & Spring	04-01-10		
Wheel Hub/Steering Knuckle Assembly	04-01-3		
Suspension and Wheel Ends—Rear	04-02-1		
Adjustments	04-02-13		
Bearing Preload	04-02-13		
Bearing Races	04-02-6		

T

Tachometer, Oil Pressure Gauge, Coolant

Temperature Gauge and Turbo Boost Gauge . 13-05-1

Description

Diagnosis & Testing

Engine Coolant Temperature Gauge

Oil Pressure Gauge

13-05-5

13-05-15

Alphabetical Index

Oil Pressure Sending Unit	13-05-15	Output Gear	07-01-79
Removal and Installation	13-05-13	Removal & Installation	07-01-23
Specifications	13-05-16	Service Tools	07-01-97
Tachometer	13-05-1	Small Sun Gear & One-Way Clutch	07-01-62
	13-05-13	Specifications	07-01-96
Tachometer System	13-05-2	Subassemblies	07-01-50
Temperature Gauge	13-05-8	Torque Converter	07-01-85
	13-05-13	Transaxle	07-01-25
Temperature Sending Unit	13-05-14		07-01-85
Turbo Boost Gauge	13-05-2	Transaxle Fluid Level Check	07-01-87
	13-05-11	Valve Body	07-01-23
	13-05-15		07-01-68
Turbo Boost Gauge Sensor	13-05-16		
Transaxle, Automatic—External Controls	07-05-1	Transaxle, Manual—Non-Turbo Engine	07-03A-1
Adjustments	07-05-12	Bearing Preload Adjustment	07-03A-39
Description	07-05-2	Cleaning & Inspection	07-03A-42
Diagnosis and Testing	07-05-3	Clutch Housing	07-03A-24
Disassembly and Assembly	07-05-9	Clutch Hub	07-03A-44
Gear Selector	07-05-9	Clutch Hub Sleeve	07-03A-44
Gear Selector Assembly	07-05-6	Description	07-03A-1
Removal & Installation	07-05-5	Differential	07-03A-36
Shift Control Cable	07-05-5		07-03A-40
	07-05-12	Disassembly & Assembly	07-03A-17
Shift-Lock Cable	07-05-7	Gear Shift Gate	07-03A-5
Shift-Lock System	07-05-3	Gearshift Linkage	07-03A-13
Specifications	07-05-13	General Service Procedures	07-03A-15
Transmission Shift Control Linkage	07-05-2	Input Shaft	07-03A-30
			07-03A-39
			07-03A-43
Transaxle, Automatic—4EAT	07-01-1	Main Shaft	07-03A-34
2-3 Accumulator	07-01-67		07-03A-40
3-4 Clutch	07-01-65		07-03A-43
Adjustments	07-01-95	Main Shift Rail	07-03A-39
Bearing Housing	07-01-82	Operation	07-03A-2
Bearing Preload & Shim Selection	07-01-90	Removal & Installation	07-03A-5
Bearing/Stator Support	07-01-82	Reverse Idler Gear	07-03A-44
Cleaning & Inspection	07-01-85	Service Tools	07-03A-46
Clutch Assemblies	07-01-55	Shift Linkage	07-03A-5
Description	07-01-2	Specifications	07-03A-45
Diagnosis & Testing	07-01-5	Subassemblies	07-03A-23
Differential	07-01-78	Synchronizer Keys and Springs	07-03A-44
Differential Oil Seals	07-01-87	Synchronizer Ring	07-03A-43
Disassembly & Assembly	07-01-29	Transaxle	07-03A-5
Idler Gear	07-01-80		07-03A-17
Kickdown Cable	07-01-95	Transaxle Fluid Level Check	07-03A-15
Major Service Operations	07-01-87	Transaxle Housing	07-03A-29
Oil Cooler	07-01-89	Transaxle Oil Seal	07-03A-10
Oil Pump	07-01-86		
One-Way Clutch & Planetary Carrier		Transaxle, Manual—Turbo Engine	07-03B-1
Assembly	07-01-64	Differential Shim Selection	07-03B-63

Alphabetical Index

Disassembly & Assembly	07-03B-62
Gearshift Linkage	07-03B-7
Input Gear Shaft Shim Selection	07-03B-60
Input Shaft Bearing	07-03B-50
Main Shaft Shim Selection	07-03B-57
Operation	07-03B-4
Removal & Installation	07-03B-7
Service Procedures	07-03B-17
Service Tools	07-03B-65
Shift Linkage	07-03B-6
Specifications	07-03B-64
Subassemblies	07-03B-64
Transaxle Fluid Level Check	07-03B-36
Transaxle Oil Seal	07-03B-9
Trim, Exterior	01-08-1
Cowl Grille	01-08-4
Emblems	01-08-6
Moulding, Body Side	01-08-5
Moulding, Radiator Grille	01-08-1
Moldings, Windshield	01-08-2
Removal & Installation	01-08-1
Specifications	01-08-8
Shield, Front Fender Splash	01-08-6
Spoiler, Rear Deck Lid	01-08-6
Trim, Interior	01-05-1
Carpets	01-05-11
Convertible Top Retainer	01-05-9
Dampening Inserts	01-05-12
Dash Panel & Cowl Service Plugs	01-05-13
Description	01-05-1
Door Scuff Plate & Side Trim	01-05-11
Floor Pan Service Plugs	01-05-13
Floor Panels, Luggage Compartment	01-05-14
Hardtop Header Trim Cover	01-05-11
Removal & Installation	01-05-1
Specifications	01-05-14
Trim Panel, Cowl Side	01-05-6
Trim Panel, Luggage Compartment Rear	01-05-13
Trim Panel, Luggage Compartment Side	01-05-14
Trim Panels, Convertible Top Storage Compartment	01-05-8
Trim Panels, Door	01-05-1
Trim Panels, Rear Quarter	01-05-6
Watershield	01-05-5
Windshield Moulding, Side	01-05-10
Windshield Moulding, Upper	01-05-10
Turbocharger	03-04B-1
Air-Fuel/Exhaust Gas Flow	03-04B-2
Bearing Clearance Check	03-04B-3
Boost Control, Automatic	03-04B-2
Charge Air Cooler	03-04B-10
Charge Air Cooler Hoses	03-04B-10
Coolant Return Hose	03-04B-10
Coolant Supply Hose & Fitting	03-04B-10
Description	03-04B-1
Diagnosis & Testing	03-04B-2
Lubrication	03-04B-1
Oil Return Hose	03-04B-9
Oil Supply Line	03-04B-9
Operation	03-04B-2
Overboost Pressure Switch	03-04B-11
Removal & Installation	03-04B-5
Specifications	03-04B-11
Wheels and Tires	04-04-1
Air Leaks	04-04-2
W	
Aluminum Wheels	04-04-2
Balance Weights	04-04-7
Description	04-04-1
Diagnosis	04-04-2
Dynamic Tire Balance	04-04-7
Maintenance	04-04-2
Off-Vehicle Balancing	04-04-8
On-Vehicle Balancing	04-04-8
Service	04-04-4
Service Tools	04-04-9
Spare Tire	04-04-1
Specifications	04-04-8
Static Tire Balance	04-04-7
Steel Wheels	04-04-2
Tire & Wheel Balance	04-04-6
Tire Inflation	04-04-3
Tire Maintenance	04-04-3
Tire Replacement	04-04-6
Tire Rotation	04-04-8
Tire Size & Inflation Pressure Label	04-04-1
Tires	04-04-1
Wheel Lug Nuts	04-04-2
Wheels	04-04-2
Wiper and Washer Systems	01-16-1
Adjustments	01-16-11

Alphabetical Index

Description	01-16-1	Wiring and Circuit Protection	18-01-1
Diagnosis & Testing	01-16-2	Connectors	18-01-4
Linkage	01-16-9	Description	18-01-2
Nozzles & Hose	01-16-10	Fuse Link	18-01-6
Pump	01-16-7	Fuse Link—Charging System	18-01-6
Removal & Installation	01-16-7	Fuse Panel, Interior	18-01-5
Reservoir & Washer Pump	01-16-10	Main Fuse Box	18-01-5
Specifications	01-16-12	Removal & Installation	18-01-4
Washer System	01-16-1	Service Tools	18-01-15
Windshield Wiper Arm Position	01-16-11	Specifications	18-01-15
Wiper Arm	01-16-8	Wire Ends	18-01-4
Wiper Blade	01-16-7	Wire Harness	18-01-7
Wiper Motor	01-16-8		
Washer Nozzle Aim	01-16-11		
Wiper System	01-16-1		
Wiper/Washer Switch & Lever	01-16-10		